


**CONDITIONS FOR ISSUING
CONSTRUCTION WATER PERMITS
AMADOR WATER AGENCY**

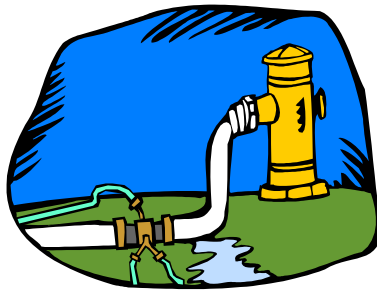

Issued by Customer Service Department 4/1/2004

CONDITIONS OF HYDRANT PERMITS

- I. Permit holder shall, by acceptance and use of this permit, be responsible for any damages to the hydrant or appurtenances. As a result of the use herein authorized, shall be responsible for the cost of its repairs, and agree to pay such as soon as the amount thereof is authorized.

Open and close hydrant slowly, using a standard fire hydrant wrench-
(spanner wrench issued)

- II. The permit must, at all times be carried in the vehicle drawing water, for inspection by the Agency, fire department or any person delegated by the Agency to inspect vehicles drawing water.
- III. Hydrant use **must** be authorized by Agency personnel.
- IV. **If using a meter, a reading must be called in monthly. Call (209) 223-3018 or fax to (209) 257-5281. If using a load count, a load count sheet must be turned in monthly to the business office at 12800 Ridge Road, Sutter Creek.**
- V. Water trucks, tanks, or hoses must be equipped and certified for backflow prevention, or inspected for air gap separation. Approved backflow or air gap devices are required in all circumstances and are the responsibility of the permit holder.
- VI. Hydrant meter must be returned upon request of the Agency for inspection or exchange. If the meter is not returned, the permit will be void. Appropriate measures will be taken to retrieve and protect Amador Water Agency property.
- VII. A construction meter repair/security deposit is necessary. This amount represents the estimated replacement cost of a lost, stolen or totally damaged hydrant meter. This deposit amount will be applied to any and all damage incurred to any part of the meter.
- VIII. The hydrant meter, couplings, screens and measuring elements are the sole property of the Amador Water Agency.
- IX. After the meter has been returned to the Amador Water Agency offices and inspected by Agency personnel, any costs incurred by permit holder will be applied to the deposit. *If a balance is due to the customer, it will be returned by mail.*

PLEASE NOTE: A minimum construction meter use fee will be charged until the meter is returned. This fee applies even if the water is not used.

CONDITIONS OF LOAD COUNT PERMITS

- I. Permit holder shall, by acceptance and use of this permit, be responsible for any damages to the hydrant or appurtenances, as a result of the use herein authorized, shall be responsible for the cost of its repairs, and agree to pay such costs as soon as the amount thereof is authorized.

Open and close hydrant slowly, using a standard fire hydrant wrench

- II. The permit must, at all times be carried in the vehicle drawing water, for inspection by the Agency, fire department or any person designated by the Agency to inspect vehicles drawing water.
- III. Hydrant use must be authorized by local fire department and Agency personnel.
- IV. If using a load count, a load count sheet must be turned in monthly.
- V. Water trucks, tanks, or hoses must be equipped and certified for backflow prevention, or inspected for air gap separation. Approved backflow or air gap devices are required in all circumstances and are the responsibility of the permit holder.

12800 Ridge Road Sutter Creek, California 95685
(209) 223-3018 FAX (209) 257-5281

HYDRANT METER LOAD COUNT AGREEMENT

Applicant's Name _____ Account No. _____

Mailing Address _____ State _____ Zip _____

Phone Number _____ Meter No. _____

Size _____ Meter Tails _____ Gate Valve _____ Hydrant Adaptor _____ Reducer _____

Water System and Location of Use _____

Estimated amount of water to be used _____

Type of Use: Filling water truck Swimming Pool Irrigation Other _____

Meter Checked Out and Issued By _____

Date Meter Issued _____ Date of Return _____ Total Days Used _____

Reading at Check Out _____ Reading at Return _____ Total cu.ft. _____

Total Water Used (cu.ft.) _____ X \$1.50 per 100 cu.ft. = \$ _____

Total days used _____ X \$1.00 = \$ _____

TOTAL = \$ _____

Less Deposit = (\$ _____)

TOTAL REFUND = \$ _____

TOTAL DUE AWA = \$ _____

CONDITIONS FOR USE OF METERS

1. For fire safety, the meter must be removed from the hydrant each night and whenever not in use.
2. Service is subject to AWA's Water Codes.
Applicant shall not allow hydrant flows to exceed 200 gallons (28 cu.ft.) per minute for 2-1/2" meters and 50 allons (7 cu.ft.) for 1" meters. Flows shall be regulated by the meter valve, not the hydrant valve. The hydrant valve must be fully opened when in use.
3. Applicant shall open and close hydrant valves slowly – 2 minutes each way minimum.
4. Applicant shall only use hydrant(s) at locations specified by the Agency.
Hydrant meter rental is limited to one month, thereafter renewable in one month increments at the discretion of the District.
5. Meter shall be used only in locations approved by the Agency and specified above.
Applicant agrees that he/she will be responsible for, and reimburse Agency for any costs incurred as a result of applicant's failure to adhere to these conditions.

I understand and agree to the foregoing:

Applicant's Signature: _____ Date: _____